STEVAL-IFP028V1



Data brief

Single high-side driver based on IPS160H single high-side switch for SIL2 and SIL3 compliant systems





Product summary		
Single high side driver based on IPS160H	STEVAL- IFP028V1	
Single high-side switch for safety integrity level (SIL2 and SIL3) compliant systems	IPS160H	
STM32-based USB-to- serial interface bridge board	STEVAL- PCC009V2	
GUI for STEVAL- IFP028V1 and STEVAL- IFP034V1	STSW-IPS16X	

Features

- Operating voltage from 8 to 60 V
- Operating current up to 2.5 A
- Programmable cut-off delay time
- Reverse polarity protection
- Galvanic isolation on PCB
- Input pins compatible with V_{CC} rails
- Green LED for channel ON/OFF status
- Red LED for common diagnostics on:
 - Open load in OFF state
 - Cut-off
 - Thermal protection
 - Red LED functionality on DIAG pin guaranteed from V_{CC} = 12 V
- Microcontroller interface
- IEC 61000-4-2, IEC61000-4-4 and IEC 61000-4-5 compliant
- RoHS compliant

Description

The STEVAL-IFP028V1 evaluation board is designed to help you analyze the functionality of the IPS160H single high-side switch for SIL2 and SIL3 compliant systems.


The board meets application requirements for galvanic isolation between the user interface and the power interface through optical isolation implemented with two optocouplers, OPTO1 and OPT2, for forward signals to the device and for diagnostic feedback signals, respectively, in compliance with IEC 61000-4-2, IEC61000-4-4, IEC 61000-4-5 requirements.

The STEVAL-IFP028V1 can operate in the 8 to 60 V range, but operation of the red LED on the DIAG pin is only ensured above V_{CC} = 12 V, and you must ensure that jumper J1 is open for supply voltages above 40 V to avoid permanent damage to the SMCJ40CA transient-voltage-suppression (TVS) diode. The board also optimizes thermal performance through a careful layout which includes a dedicated copper area connected to the exposed pad of the PSSO12 package, which also serves to dissipate heat.

You can use your PC to monitor the status of the output on the power side and receive fault information from the IPS160H DIAG pin by connecting the STEVAL-PCC009V2 interface board between your PC (via USB) and the STEVAL-IFP028V1 board (via 30-way flat cable), and then running the STSW-IPS16X GUI software, which is freely available on the ST website.

Schematic diagram



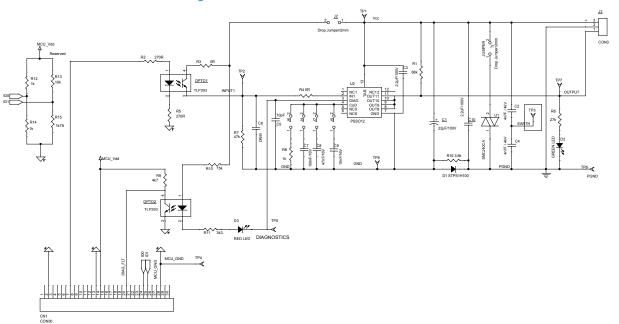

STEVAL-IFP028V1 Schematic diagram

1

Revision history

Table 1. Document revision history

Date	Version	Changes
08-Mar-2016	1	Initial release.
13-May-2019	2	Minor text and formatting changes. Updated document Title, Section Description and Section 1 Schematic diagram Added Section Device summary table



IMPORTANT NOTICE - PLEASE READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, please refer to www.st.com/trademarks. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2019 STMicroelectronics – All rights reserved